



## Assembly instructions for Quickie Neon2 Swing MEM6289, MEM6290

1. Remove wheel and sleeve on both sides.

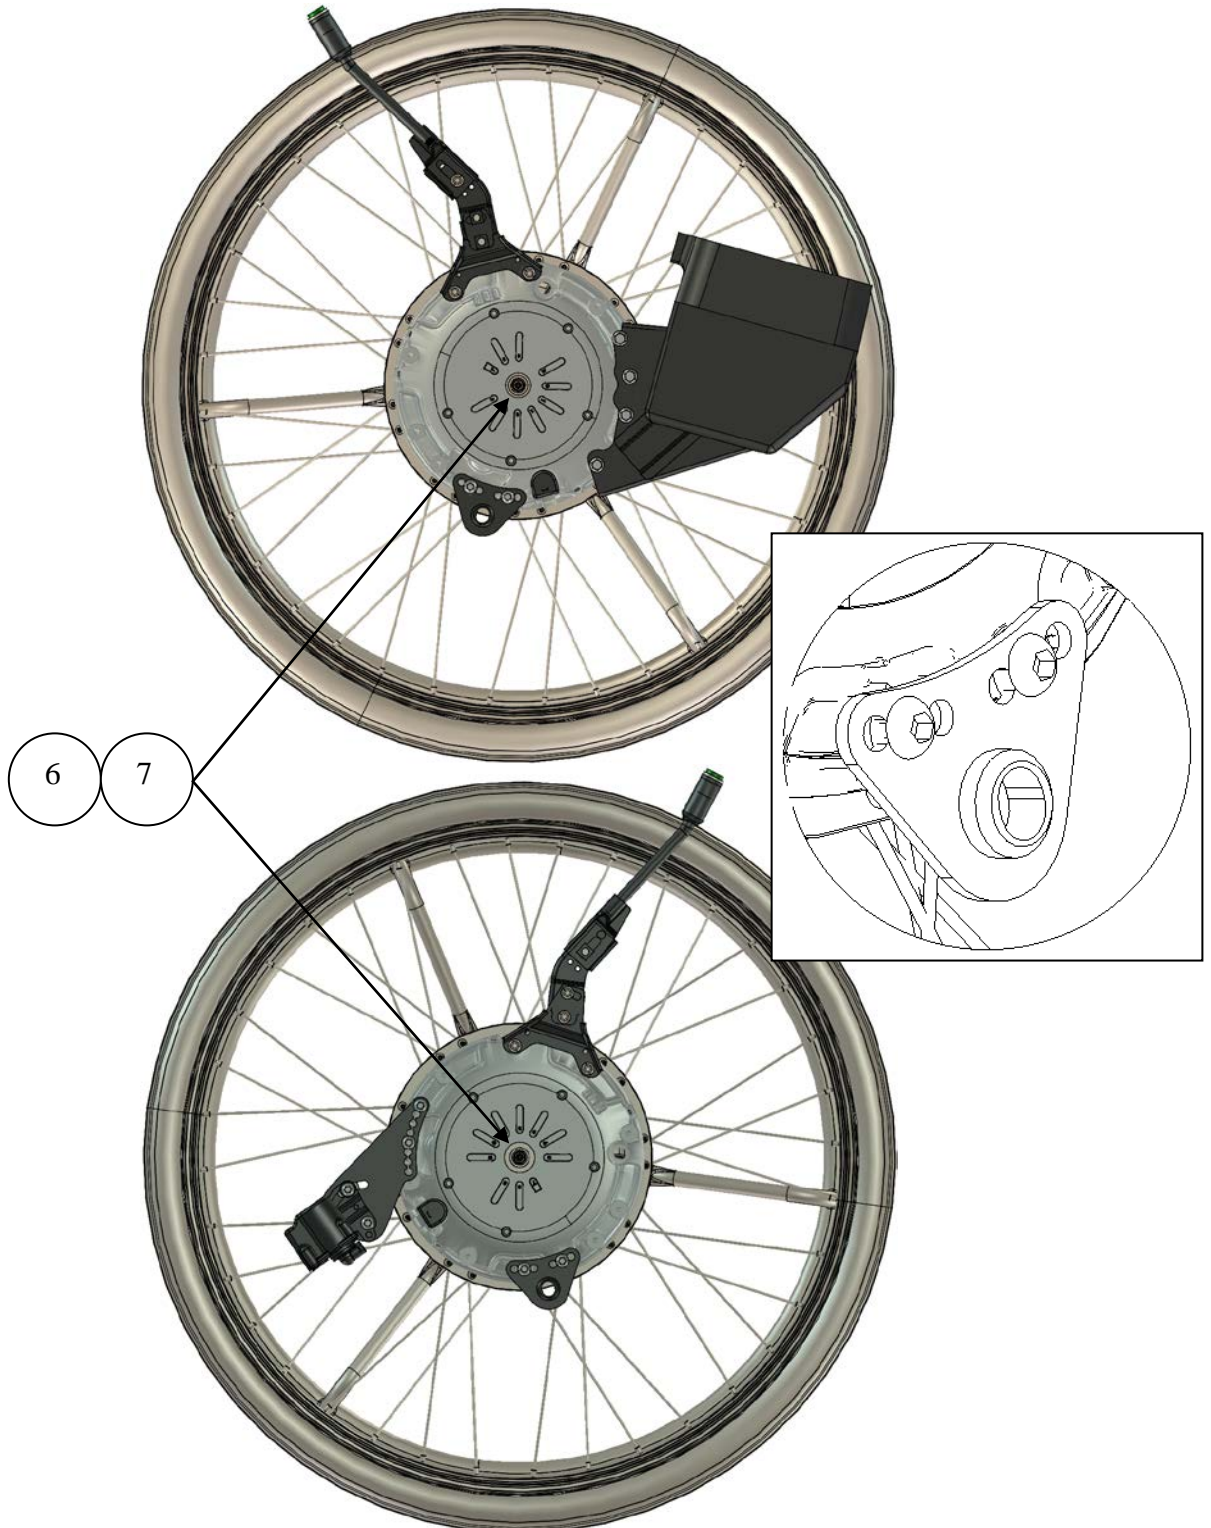

2. Check the correct placement for the eMove, and that it is axle  $\varnothing 12,7 \times 55,5$  with Part Number: XOE-2530E-AO and Spacer with Part Number: XOC-25383-00.

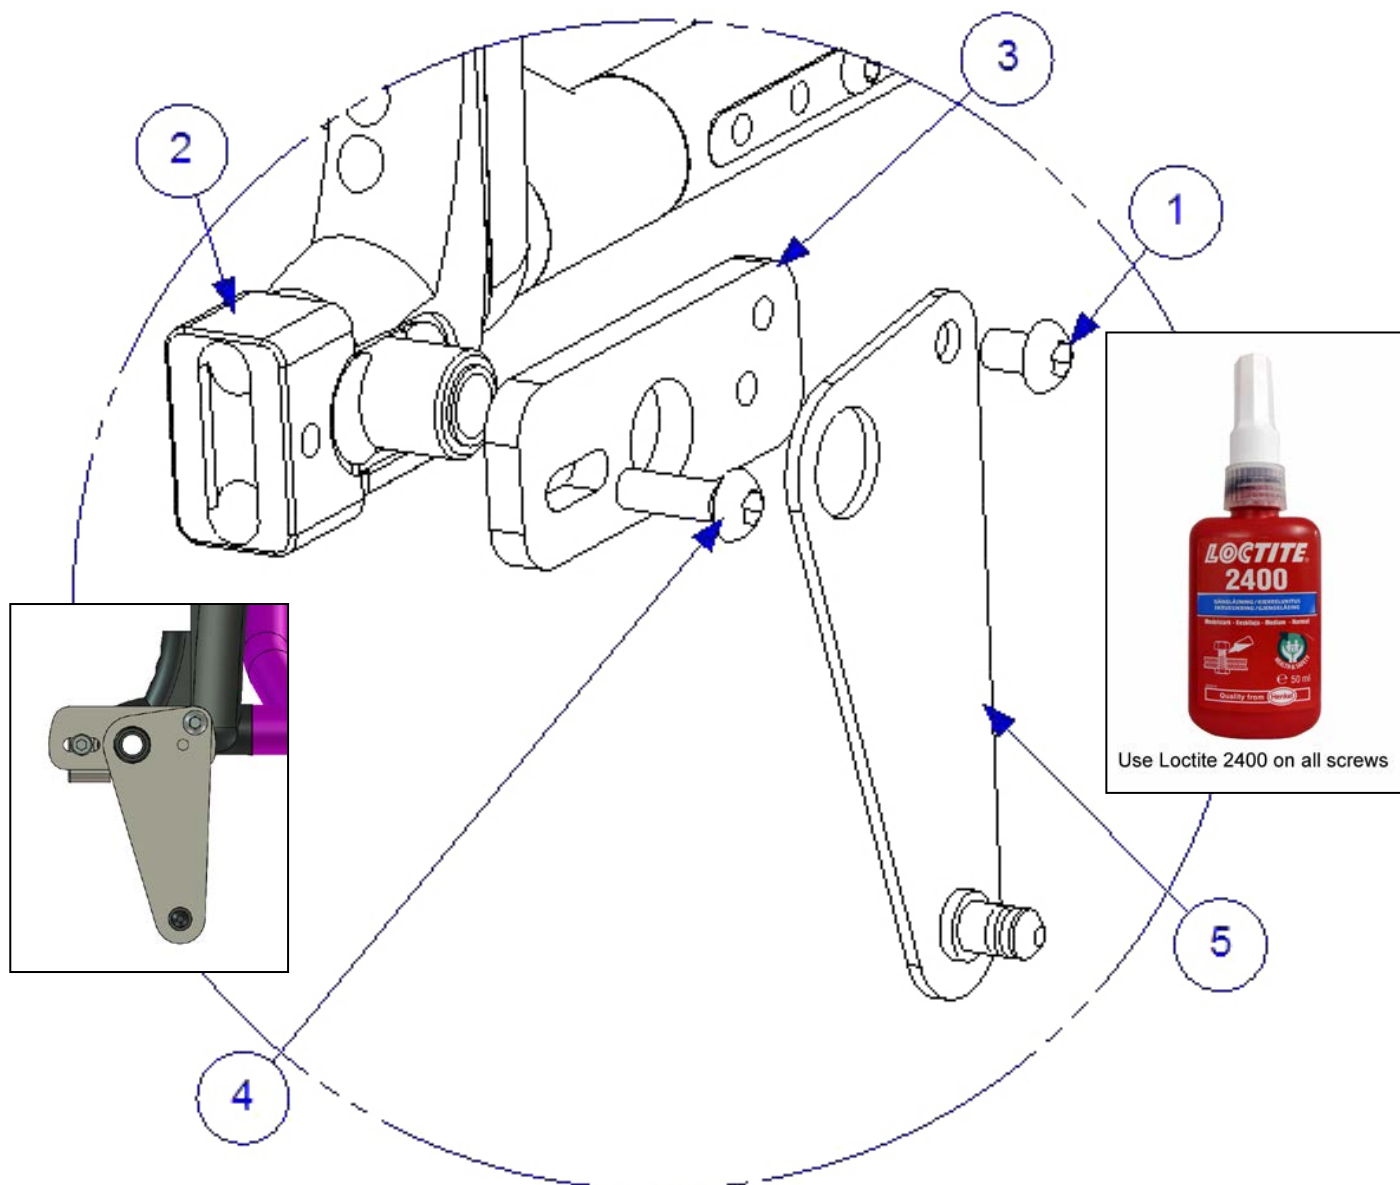

3. Remove original sleeve with spacers.
4. Assemble the plate according to pictures above.

Parts for right side mounting:

Item No.	Part Number	Qty	Description
1	XSM8X12	1	Screw Round M8 x 12
2	300083	1	Clamp Neon2
3	300082	1	Bracket
4	XSM8X25	1	Screw Round M8 x 25
5	300045	1	Left Bracket
6	XOC-25383-00	1	Spacer Ø12,7
7	93440-120520	1	Circlip

**Note!** 300045 for Right side and 300046 for left side.

**Note!** If you only order the mounting set, the axle, axle spacer and the Circlip **are not included**, for replacement see the service manual.